POCKET ASSEMBLY

A. ATTACHING THE POCKET:

Align the pocket to the lower edge of the opening in the panel. Then slide in, as shown, until pocket snaps into place. The front of pocket should rest flush to the front of panel.

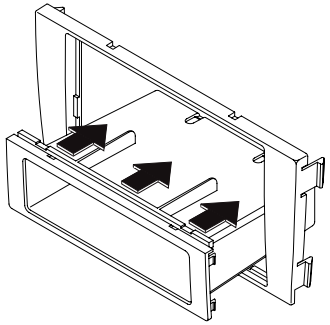

MOUNTING THE RADIO

B. DIN INSTALLATION:

1. For DIN mount application, slide into radio opening.

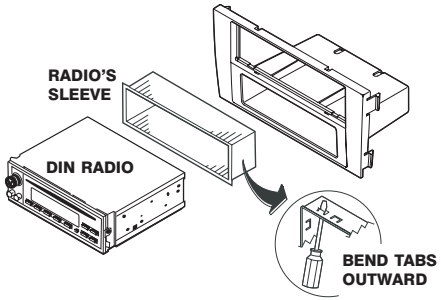

B. ISO DIN MOUNT:

1. Snap the Left/Right brackets to the 5951 kit panel.
2. Align, position, and bolt the aftermarket two ISO-DIN.

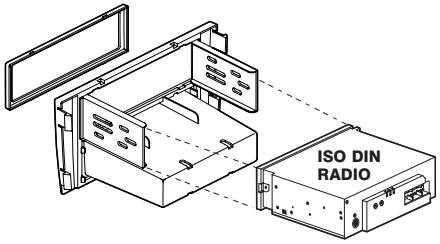

CAUTION:
REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE RADIO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.

MOUNTING THE RADIO (2 SINGLE DIN / DBL DIN)

A. DIN-ISO / DBL DIN MOUNT:

1. Snap the L/R brackets to the 5933 Kit Panel.
2. Align, position and bolt the aftermarket two IS0-DIN or one Double DIN head unit to the 6068 brackets. Use hardware supplied with radio to secure the mounting brackets.

CAUTION:
REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE RADIO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.

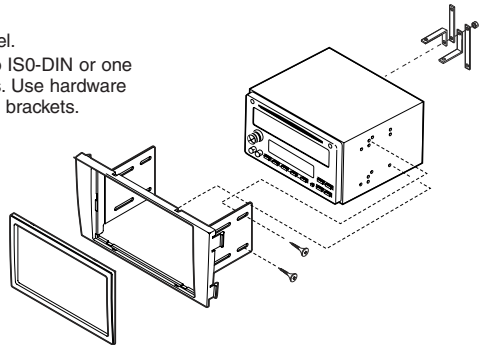

SCOSCHE®

AU2380B

2000-UP SELECT AUDI A6
ALL-IN-ONE, SINGLE DIN & DOUBLE-DIN KIT

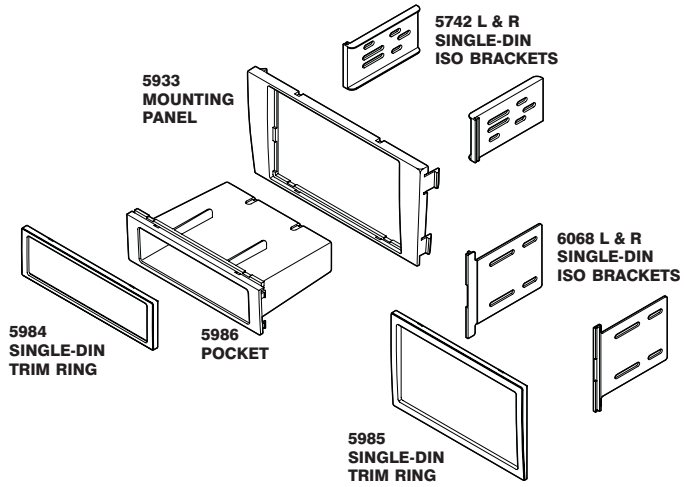
5742 L & R SINGLE-DIN ISO BRACKETS
5933 MOUNTING PANEL
6068 L & R SINGLE-DIN ISO BRACKETS
5984 SINGLE-DIN TRIM RING
5986 POCKET
5985 SINGLE-DIN TRIM RING

FACTORY WIRING CODES

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

VW03B
2002-UP Volkswagen and BMW

INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche AU2380B Kit. This Kit was manufactured with the highest of quality standards.

CAUTION: DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIR BAG WIRING - AIR BAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

RADIO DISASSEMBLY

Using European radio removal tools (4), slide in to the (4) slots on the factory radio. Pull out, disconnect and remove

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (AU2380B) in 2000-Up Select Audi A6 Vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2006 SCOSCHE INDUSTRIES, INC.

SI 07/06 - AU2380B (3000003)